



Motorola Rival Keyboard Replacement

Replace the keyboard of your Motorola Rival.

Written By: Sekani Paul



INTRODUCTION

Use this guide to replace a failed keyboard on the Motorola Rival.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [64 Bit Driver Kit](#) (1)
-

Step 1 — Keyboard




- Locate the lever to release the cover of the device.
- Push down on lever and pull the cover away from the device.

Step 2





- Locate the battery on the back of the phone.
- Remove the battery from the phone.

Step 3

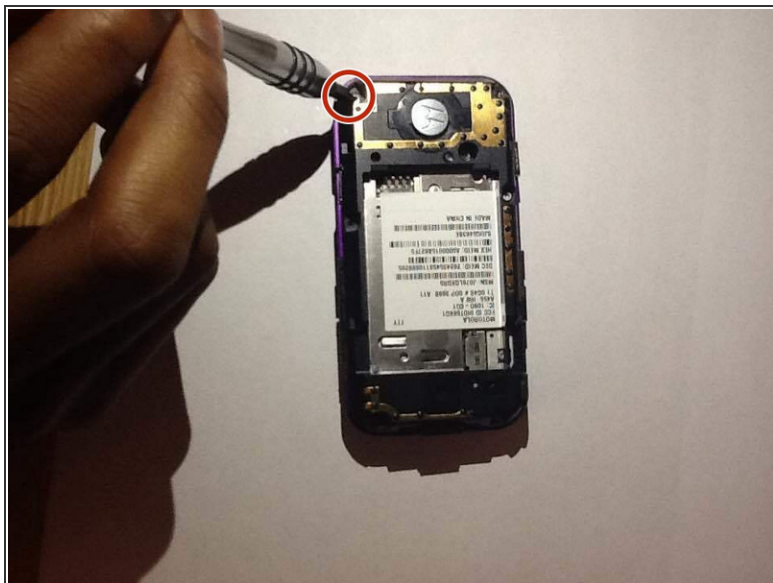


- Take out the 6 screws on the corners of the phone in order to get inside of the phone.

Step 4

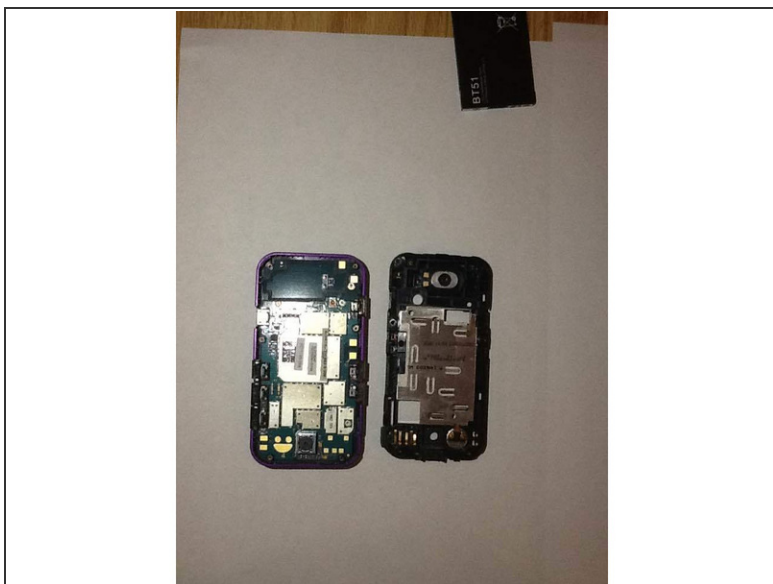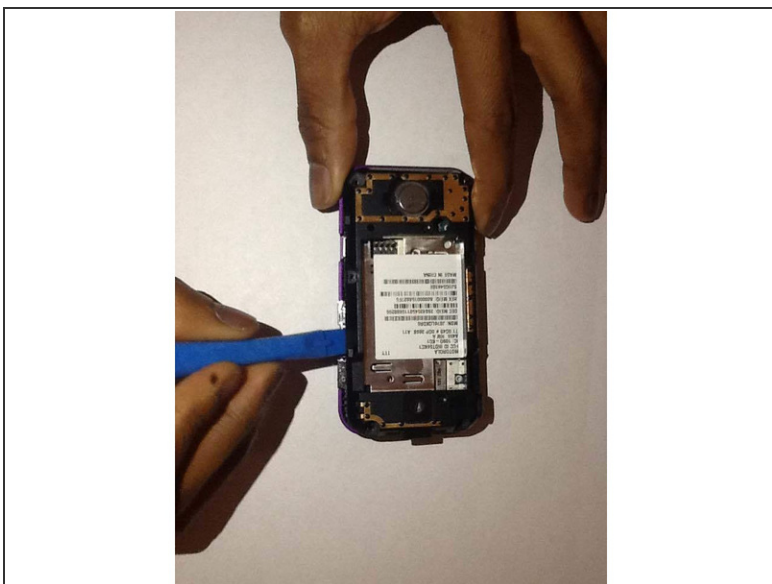


- Using the pry tool gently remove the back piece of the phone from the front piece.

Step 5

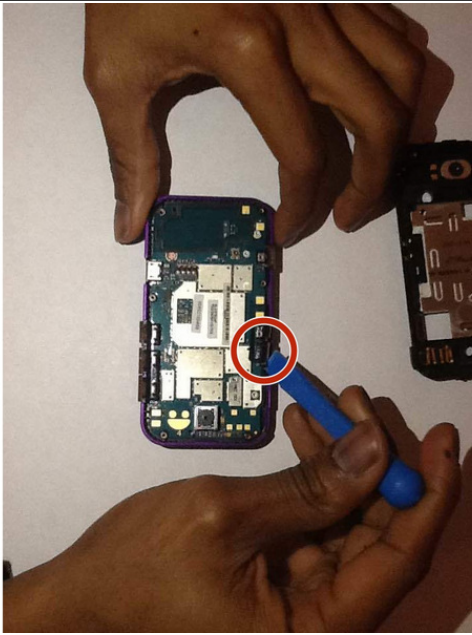


- Using the pry tool remove the camera button from the phone.

Step 6

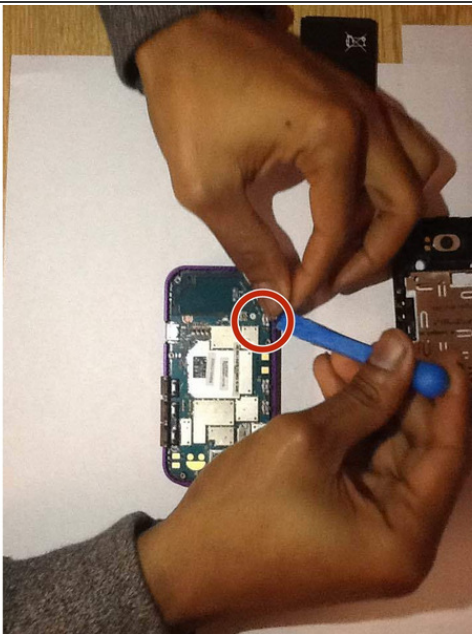



- Using the pry tool, remove the lock/mute button.

Step 7

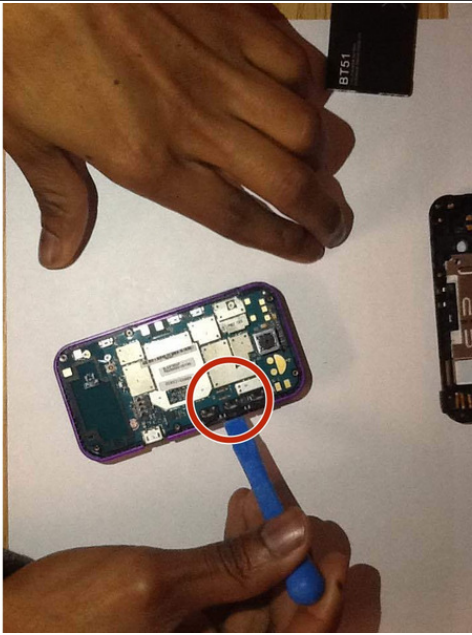



- Using the pry, remove the volume buttons.

Step 8

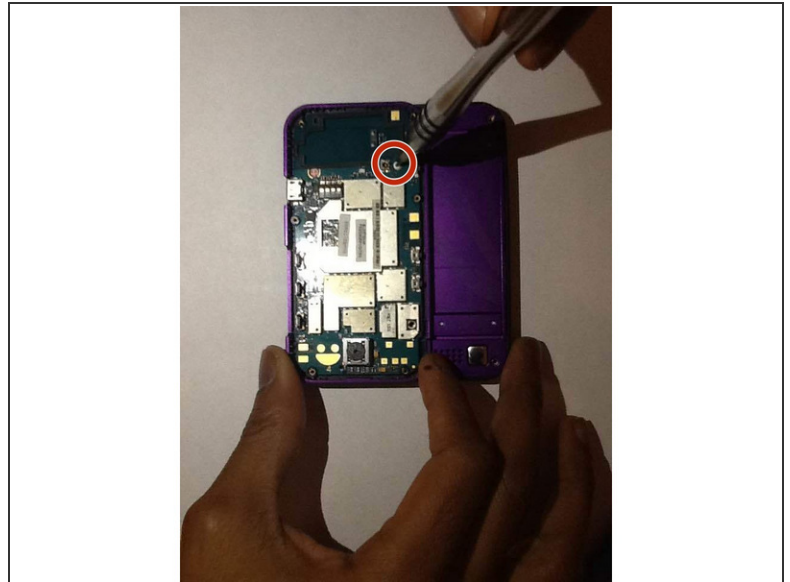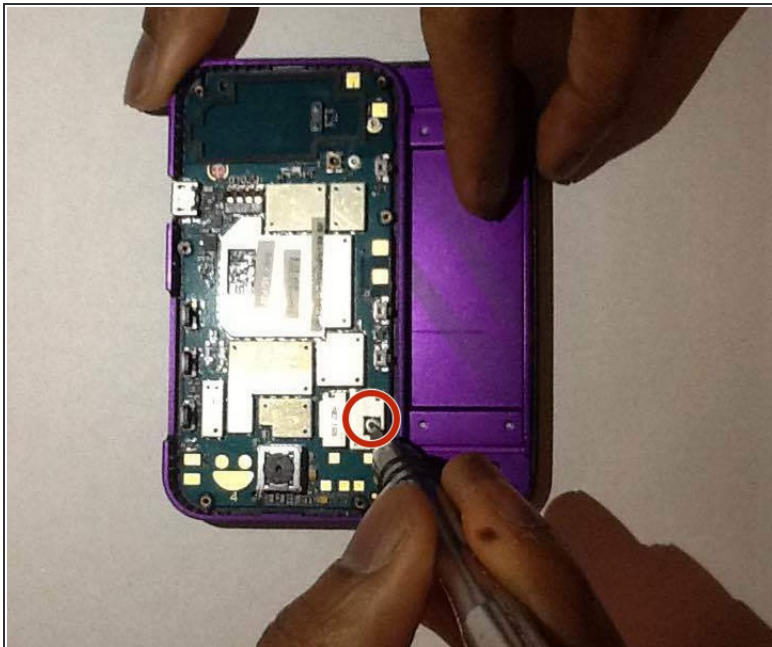


- Using a screw driver, locate and remove the screws that connect the keyboard to the mother board.

Step 9

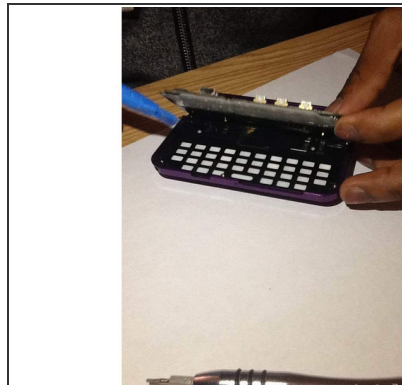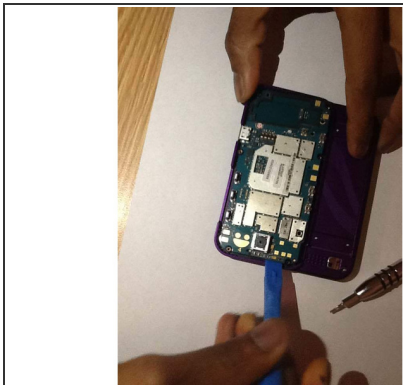

- With the pry tool, gently lift the mother board out of the frame.
- Be sure to be gentle when lifting it up.

Step 10

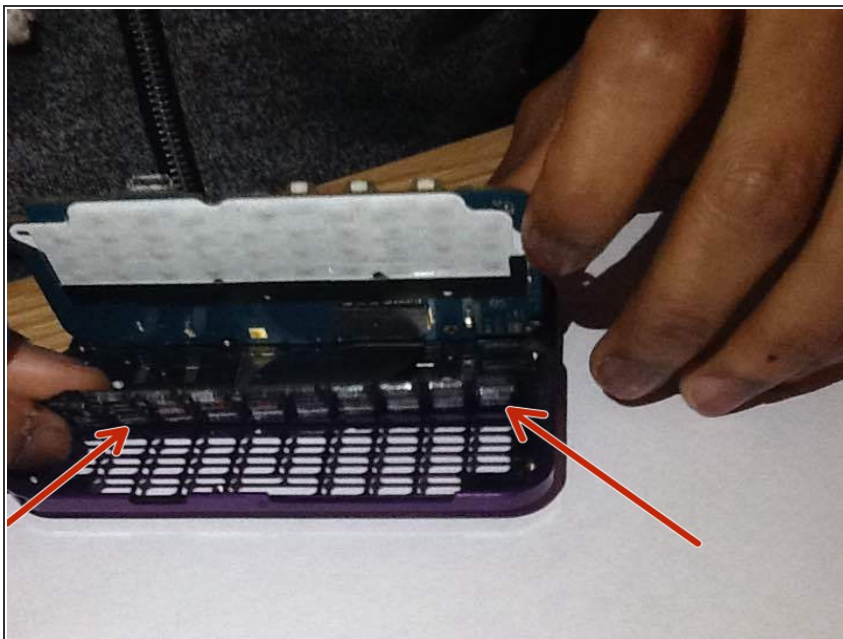

- Remove the keyboard from the frame.
- Replace with new keyboard

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 03:52:27 PM.